



An Integrated Approach to the Delivery of Community Health Services

Compaq NX9040 Laptop & Printer Tips

Battery Tips

- If the battery pack is extremely warm or cool, allow the battery pack to reach room temperature. The battery will warm slightly when being charged.
- Make sure that the notebook is connected to AC power, and that all connections are secure.
- If you are using an AC adapter, make sure the AC adapter is the AC adapter included with the notebook or a replacement adapter made for the Compaq NX9040.
- If the battery will not charge and the adapter is plugged into a power strip, unplug it from the power strip and plug it directly into an electrical outlet to determine if the power strip is working properly.
- Make sure the battery is correctly inserted.
- If battery still does not hold a charge, call the Cornerstone Call Center. The battery may be defective or have reached the end of its useful life. Battery life varies, as it is affected by power levels and maintenance and storage practices.

Connecting the Portable Printer to the Compaq Laptop

Connect the printer to the laptop using the black cable labeled part number C8231A to the LPT port.



Connect this end to the laptop (pink LPT port).



Connect this end to the Printer.

